



Einhell

EXPERT PLUS



Cordless Surface Brush

PICOBELLA

Item No.: 3424200

Ident No.: 11019

Bar Code: 4006825645767

The Einhell PICOBELLA cordless surface brush is a multifunctional supporter to clean stone, wood, artificial turf and edges. As a member of the Power X-Change rechargeable battery system, every system rechargeable battery can be used. The PICOBELLA has an integrated garden hose connection, an all-round dirt guard hood, extra-wide rotating brush rollers, flexible forward/reverse operation and infinitely adjustable speed control. The brushes can be changed at the press of a button. A special side brush is perfectly suited for perimeter work. The additional handle has an integrated garden hose guide. The product is supplied complete with a MEDIUM brush for cleaning stone. This product comes without a battery or charger.

Features & Benefits


- Member of the Power X-Change family
- Multifunctional: Cleaning of stone, wood, artificial turf & edges
- Only one working step thanks integrated garden hose connection
- Brush change without tools at the push of a button
- Special side brush for cleaning right to the wall and into edges
- Extra wide rotating brush for fast cleaning results
- Max. results thanks flexible forward-/reverse running of brush
- Height adjustable aluminium tube enables back-friendly work
- Steplessly adjustable speed control for additional flexibility
- Surrounding protection cover as perfect splash guard
- Additional handle with integrated garden hose routing
- Brush MEDIUM for stone cleaning included in delivery
- Ergonomic main handle with softgrip
- Supplied without battery and charger (available separately)

Technical Data

- Voltage 18 V
- Rotation speed 800 - 1400 min⁻¹
- Diameter of brush 115 mm
- Working width (brush MEDIUM) 215 mm

Logistic Data

- Product weight (kg) 3.8
- Gross weight (kg) 5.3
- Dimensions single packaging 1150 x 250 x 215 mm
- Pieces per export carton 2 Pieces
- Gross weight of export carton 10 kg
- Dimensions export carton 1170 x 270 x 320 mm
- Container quantity (20"/40"/40"HC) 572 | 1144 | 1304

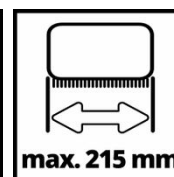

Available as special accessories



Bürste MEDIUM (Stein)
Surface Brush Accessory
Item No.: 3424120
Bar Code: 4006825646245
Einhell Accessory



Bürste SOFT (Holz, Kunstrasen)
Surface Brush Accessory
Item No.: 3424121
Bar Code: 4006825646252
Einhell Accessory



18V 30min Power X-Change
Charger
Item No.: 4512011
Bar Code: 4006825587029
Einhell Accessory



18V 5,2 Ah P-X-C Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power-X-Boostcharger 6 A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



Power-X-Twincharger 3 A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 3,0 Ah PXC Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 4-6 Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0 Ah Power-X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0 Ah Power-X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 3,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512041
Bar Code: 4006825613698
Einhell Accessory



18V 4,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory